

Microcassette™-Corder

Operating Instructions

Инструкция по эксплуатации (обратная сторона)

M-650V/560V/455/450

Sony Corporation ©2002 Printed in China

<http://www.sony.net/>

About This Manual

The instructions in this manual are for 4 models. The M-650V is the model used for illustration purposes.

Their differences are shown in the table below:

	M-650V	M-560V	M-455/M-450
Tape counter	○	○	—
MIC jack	○	—	—
REC lamp	○	—	—
BATT/□ lamp	○	—	—
REC/BATT lamp	—	○	—
BATT lamp	—	—	○
VOR	○	○	—
FAST PB	○	—	—
Handstrap	○	—	—

○: provided or supplied


—: not provided or not supplied

There is no difference between M-455 and M-450 except for the supplied accessories.
For information about the supplied accessories, see "Specifications" of this manual.

Preparing Power Sources

Choose one of the following power sources.


Dry Batteries

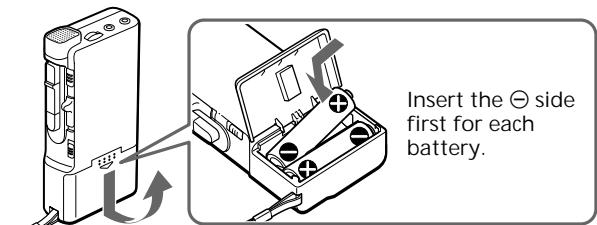


Make sure that nothing is connected to the DC IN 3V jack.

- 1 Open the battery compartment lid.
- 2 Insert two R6 (size AA) batteries with correct polarity and close the lid.

To take out the batteries

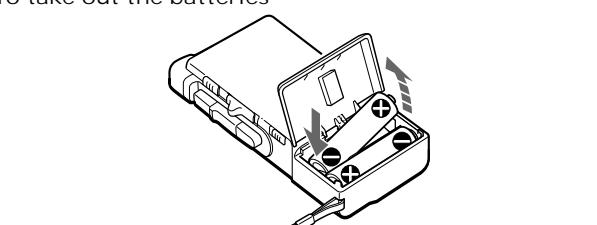

If the battery compartment lid is accidentally detached
Attach it as illustrated.

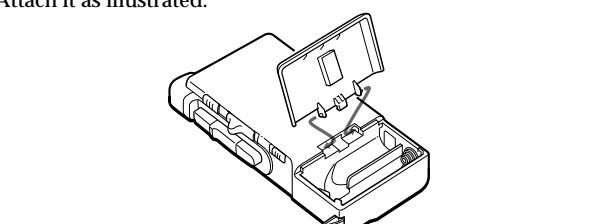

When to replace the batteries

For M-560V/455/450
Replace the batteries with new ones when the REC/BATT (M-560V) or BATT (M-455/450) lamp dims.

For M-650V

Replace the batteries with new ones when the BATT lamps go off and the □ lamp flashes.

Notes

- The unit will play back normally for a while, even after the □ lamp flashes. However, replace the batteries as soon as you can. If you do not, the playback cannot be made with normal sound, noise may be recorded and the recorded sound will not be loud enough (M-650V only).
- In the following cases you do not need to replace the batteries:
 - if the REC/BATT or BATT lamp flashes with the playback sound when you turn up the volume.
 - if the □ lamp lights momentarily when the tape starts running or at the end of the tape (M-650V only).
 - if the □ lamp flashes during FF (CUE) or REW (REVIEW) (M-650V only).

Battery life (Approx. hours) **(JEITA*)**


Batteries	Recording
Sony manganese R6P (SR)	8 (M-650V only) 10 (M-560V/455/450 only)
Sony alkaline LR6 (SG)**	26 (M-650V only) 30 (M-560V/455/450 only)

* Measured valued by the standard of JEITA (Japan Electronics and Information Technology Industries Association) (Using a Sony Microcassette)


**When using a Sony LR6 (SG) "STAMINA" alkaline dry batteries (produced in Japan)

Note

The battery life may shorten depending on the operation of the unit.

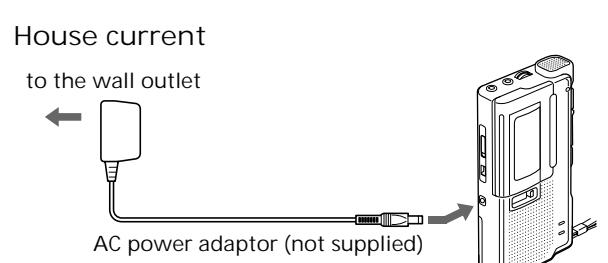

Connect the AC power adaptor to DC IN 3V and to a wall outlet. Use the AC-E30HG AC power adaptor (not supplied).




Note

Specifications for AC-E30HG vary for each area. Check your local voltage and the shape of plug before purchasing.

Recording

Make sure that nothing is connected to MIC (M-650V only).

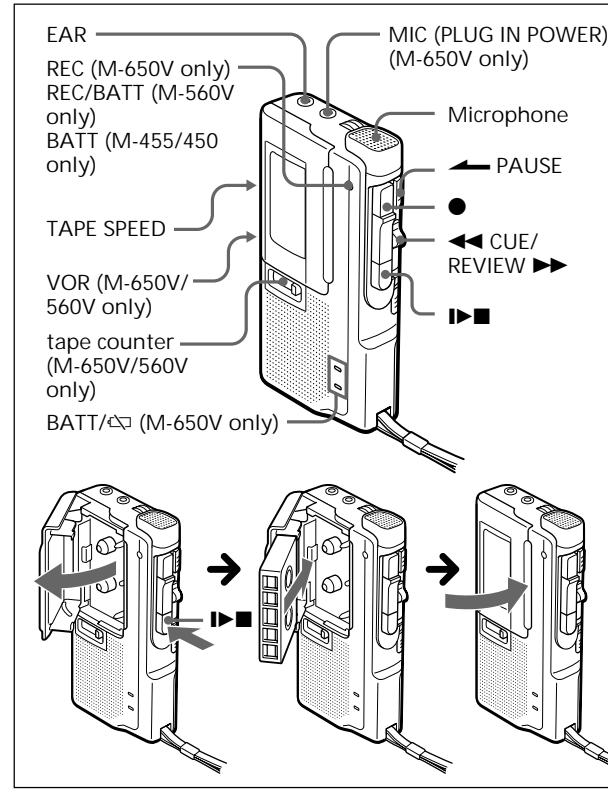

- 1 Press the reset button of the tape counter (M-650V/560V only).
- 2 Press ▶▶ and insert a standard microcassette with the side to start recording facing the head.
- 3 Select the desired tape speed.
2.4 cm for optimum sound (recommended for normal use): A 30-minute recording can be made using both sides of the MC-30 microcassette.
1.2 cm for longer recording time: A 60-minute recording can be made using both sides of the MC-30 microcassette.
- 4 Set VOR to H, L or OFF (M-650V/560V only).
If you set VOR to H or L, the unit automatically starts recording the sound and pauses when there is no sound (you can save tapes and batteries).
H : To record at meeting or in a quiet and/or spacious place.
L : To record for dictation or in a noisy place.
When the sound is not loud enough, set it to OFF, or the unit may not start recording.
- 5 Press ●.
● is pressed simultaneously and recording starts. While the tape runs, the REC lamp or REC/BATT lamp lights and flashes depending on the strength of the sound (M-650V/560V only).
Recording level is fixed.

To	Press or slide
Stop recording	▶▶
Start recording during playback	● during playback (the unit becomes in the recording mode)
Review the portion just recorded	Push up ▲◀CUE/▶▶REVIEW toward ▶▶REVIEW during the recording. Release the button at the point to start playback.
Pause recording	Slide ←PAUSE in the direction of the arrow. The REC/BATT (M-560V), BATT (M-455/450) or REC (M-650V) lamp goes off.
Take out a cassette	▶▶

Note

Select the 2.4 cm tape speed for recording, if you play back the recorded tape with another unit. Otherwise, the sound quality may be changed.


Notes on VOR (Voice Operated Recording) (M-650V/560V only)

- The VOR system depends on the environmental conditions. If you cannot get the desired results, set VOR to OFF.
- When you use the unit in a noisy place, it will stay in the recording mode. If the sound is too soft, on the contrary, the unit will not start recording. Set VOR to H (high) or L (low) depending on the conditions.


To monitor the sound

Connect an earphone (not supplied) to EAR jack. The monitor volume cannot be adjusted by VOL.

To prevent a cassette from being accidentally recorded over
Break out and remove the cassette tabs. To reuse the cassette for recording, cover the tab hole with adhesive tape.

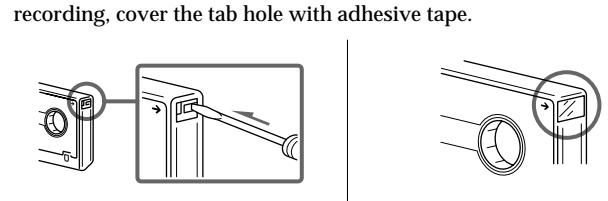

Playing a Tape

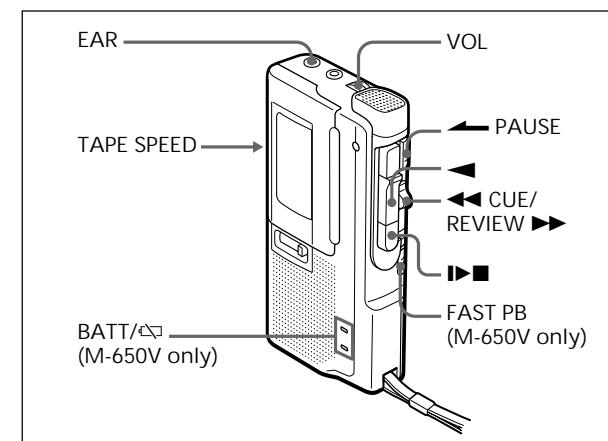

- 1 Insert a cassette with the side to start playing facing the lid.
- 2 Select the tape speed to the same speed as that used for recording.
- 3 Press ▶▶.
- 4 Turn VOL to adjust the volume.

If you plug in headphones (not supplied) to the EAR jack, you will get monaural output from both left and right channels.

To	Press or slide
Stop playback/stop fast forward or rewind*	▶▶
Pause playback	Slide ←PAUSE in the direction of the arrow. The REC/BATT (M-560V), BATT (M-455/450) or REC (M-650V) lamp goes off.
Fast forward	Slide ▲◀CUE/▶▶REVIEW toward ▲◀CUE during stop.
Rewind	Slide ▲◀CUE/▶▶REVIEW toward ▶▶REVIEW during stop.
Search forward during playback (CUE)	Keep ▲◀CUE/▶▶REVIEW pushed down toward ▲◀CUE during playback and release it at the point you want.
Search backward during playback (REW)	Keep ▲◀CUE/▶▶REVIEW pushed up toward ▶▶REVIEW during playback and release it at the point you want.

* If you leave the unit after the tape has been wound or rewound, the batteries will be consumed rapidly. Be sure to depress ▶▶.

Note

If the tape is completely wound or rewound while searching forward/backward during playback (CUE/REVIEW), the ▲◀CUE/▶▶REVIEW switch may not return to the center position when you release the switch. In this case, push back the switch to the center to start playback.

To increase the playback speed (M-650V only)
Slide the FAST PB switch in the direction of the arrow. The playback speed will be increased.

To return to the original speed, slide the FAST PB switch to the original position.

At the end of the tape

In the recording or playback mode, the tape stops at the end of the tape and the locked buttons will be released automatically (Automatic shut-off mechanism).

After fast forward or rewind, be sure to set ▲◀CUE/▶▶REVIEW back to the center.

Recording/Playback with the Connected Equipment (M-650V only)

Recording with an External Microphone

Connect a microphone to the MIC jack. Use a microphone of low impedance (less than 3 kΩ) such as ECM-T6 (not supplied). When using a plug-in-power system microphone, the power to the microphone is supplied from this unit.

Note

When recording with an external microphone, the VOR system may not work properly because of the difference in sensitivity.

Recording from another tape recorder

Connect another tape recorder to the MIC jack using the RK-G64HG connecting cord (not supplied).

Set this unit to the recording mode and another tape recorder to the playback mode. In this case set VOR to OFF.

Precautions

On power

- Operate the unit only on 3 V DC.
- For AC operation, use the AC adaptor recommended for the unit. Do not use any other type. For battery operation, use two R6 (size AA) batteries.

On the unit

- Use only the **MICROCASSETTE™** (normal position type) standard microcassettes with this unit. Non-standard cassettes cannot be used because their "L" dimension (see illustration) is different.

Standard Only standard microcassettes have a small indentation on side A.

Non-standard

Approx. 5 mm

Approx. 2.5 mm

• Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.

- Should any solid object or liquid fall into the unit, remove the batteries or disconnect the AC power adaptor, and have the unit checked by qualified personnel before operating it any further.

• Keep personal credit cards using magnetic coding or spring-wound watches etc. away from the unit to prevent possible damage from the magnet used for the speaker.

- When you do not use the unit for long, remove the batteries to avoid damage caused by battery leakage and subsequent corrosion.

• If the unit has not been used for long, set it in the playback mode and warm it up for a few minutes before inserting a cassette.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

A cassette cannot be inserted.

- The cassette is being inserted in the wrong way.
- ▲ has been already pressed.

The unit does not operate.

- The batteries have been inserted with incorrect polarity.
- The batteries are weak. Replace both batteries with new ones.

Recording cannot be made.

- There is no cassette in the cassette compartment.
- The tab on the tape has been removed. To reuse the tape for recording, cover the tab hole with adhesive tape.

Recording is interrupted.

- The VOR switch (M-650V/560V only) is set to H or L. When you do not use VOR, set it to OFF.

During CUE/REVIEW the tape stops or does not run.

В данном Руководстве

В настоящем Руководстве приводятся инструкции в отношении 4 моделей. На иллюстрациях показана модель M-650V.
Различия между моделями показаны в таблице ниже:

	M-650V	M-560V	M-455/M-450
Счетчик ленты	○	○	—
MIC (микрофонное) гнездо	○	—	—
Индикатор REC (записи)	○	—	—
Индикатор BATT/□ (батареек)	○	—	—
Индикатор REC/BATT	—	○	—
Индикатор BATT	—	—	○
VOR (включение голосом)	○	○	—
FAST PB (ускоренное воспроизведение)	○	—	—
Кистевая петля	○	—	—

○: имеется или прилагается
—: не имеется или не прилагается


Модели M-455V и M-450V отличаются только набором прилагаемых принадлежностей.
Для получения сведений о входящих в комплект принадлежностях см. раздел "Технические данные" этого руководства.

Микрокассетный диктофон Сделано в Китае
Изготовитель: Сони Корпорейшн
Адрес: 6-735 Китасинагава, Шинагава-ку,
Токио 141-0001, Япония

Подготовка источника питания

Выберите один из следующих источников питания.


Сухие батарейки

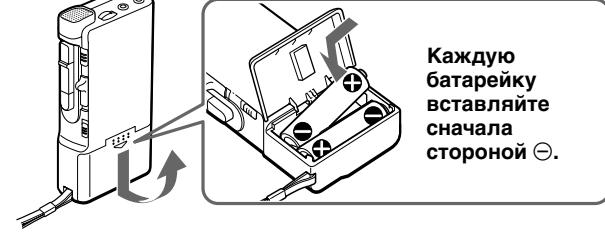

Убедитесь, что к гнезду DC IN 3V ничего не подключено.


- Откройте крышку отделения для батареек.
- Соблюдая полярность, установите две батарейки R6 (размер AA) и закройте крышку.

Чтобы вынуть батарейки

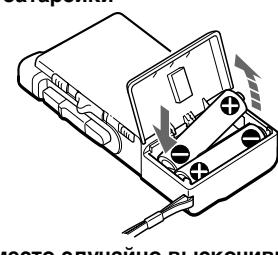

Установка на место случайно высочившей крышки отделения для батареек

Присоединить, как показано на рисунке.

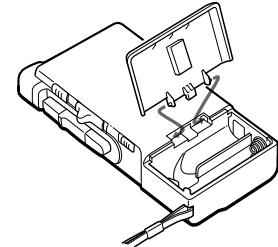

Когда следует заменять батарейки

Для M-560V/455/450
Замените батарейки на новые, когда гаснет индикатор REC/BATT (M-560V) или BATT (M-455/450).

Для M-650V
Батарейки следует заменить, когда погаснет индикатор BATT и загорится индикатор □.

Примечания

- Даже когда лампочка □ начинает мигать, диктофоном можно пользоваться еще некоторое время. Однако это значит, что батарейки следует заменить как можно скорее. В противном случае при воспроизведении могут появляться искажения звука, запись может сопровождаться шумом, а ее уровень может понизиться (только модель M-650V).
- Заменять батарейки нет необходимости в следующих случаях:
 - Если индикатор REC/BATT или BATT мигает вместе с воспроизведенным звуком при увеличении громкости.
 - Если лампочка □ загорается ненадолго, когда лента приходит в движение или заканчивается (только модель M-650V).
 - Если лампочка □ мигает при использовании функциями FF (CUE) или REW (REVIEW) (только модель M-650V).

Примерный срок службы батареек (в часах) (JEITA*)

Батарейки	Продолжительность записи
Sony марганцевые R6P (SR) (только модель M-650V)	8 (только модель M-650V) 10 (только модель M-560V/455/450)
Sony alkaline LR6 (SG) (щелочные)** (только модель M-650V)	26 (только модель M-650V) 30 (только модель M-560V/455/450)

* Измеренное значение по стандарту JEITA (Japan Electronics and Information Technology Industries Association) (при использовании микрокассеты Sony)

**При использовании сухих щелочных батареек Sony LR6 (SG) "STAMINA" (сделанных в Японии)

Примечание

Срок службы батареек может сокращаться в зависимости от режима эксплуатации аппарата.

Питание от сети

к сетевой розетке



Подключите адаптер сетевого питания к гнезду DC IN 3V и к сетевой розетке. Пользуйтесь прилагаемым адаптером AC-E30HG (в комплект не входит).


Полярность вилки



Технические характеристики AC-E30HG различаются в зависимости от каждого географического региона. Перед тем как приобретать аппарат проверьте напряжение в местной сети и форму вилки.

Запись

Убедитесь, что к гнезду MIC ничего не подключено никаких соединителей (только модель M-650V).

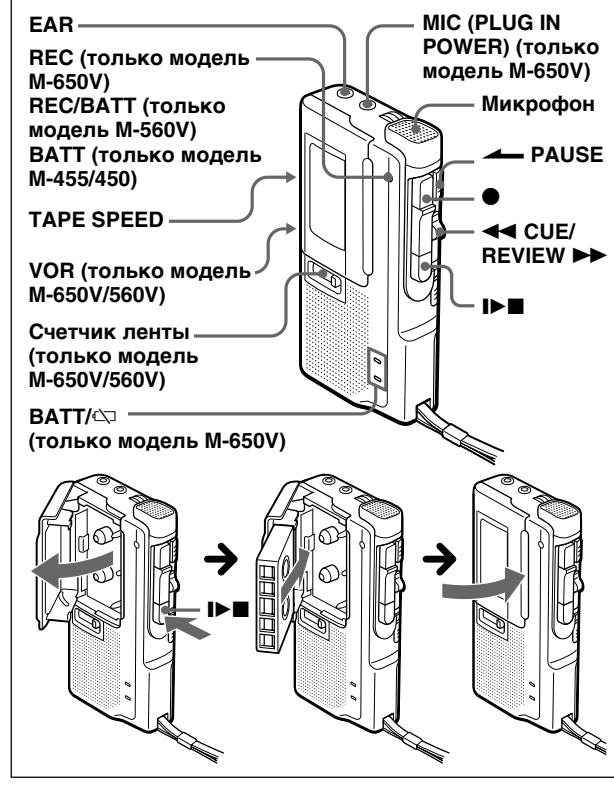

1 Нажмите кнопку сброса счетчика ленты (только модель M-650V/560V).

2 Нажмите ►■ и установите в диктофон стандартную микрокассету так, чтобы сторона, на которую производится запись, была обращена наружу.

3 Выберите нужную скорость ленты.

Оптимальное качество звука обеспечивается при скорости **2,4 см** (рекомендуемая скорость в обычных условиях); продолжительность записи на обеих сторонах микрокассеты MC-30 при этом составляет 30 минут. Продолжительность записи увеличивается при скорости **1,2 см**, при этом на обеих сторонах микрокассеты MC-30 она составляет 60 минут.

4 Установите переключатель VOR в положение H, L или OFF (только модель M-650V/560V).

Когда переключатель VOR установлен в положение H или L, диктофон автоматически начинает запись звука и делает паузу, когда перестает улавливать звук (что позволяет экономить ленту и батарейки).

Режим H: Для записи на заседаниях, в отсутствие шумового фона или в больших помещениях.

Режим L: Для диктовки или записи в шумном месте.

Если громкость записываемого звука недостаточна, переключатель следует установить в положение OFF, так как автоматическое включение записи может не работать.

5 Нажмите ●.

Одновременно нажмите ▲, и начнется запись. Во время движения ленты лампочка REC или REC/BATT светится, меняя яркость в зависимости от силы звука (только модель M-650V/560V).

Уровень записи остается постоянным.

Для того, чтобы	Нажмите или передвиньте
Остановить запись	►■
Начать запись во время воспроизведения (диктофон переходит в режим записи)	● во время воспроизведения (диктофон переходит в режим записи)
Прослушать только что записанный участок	Во время записи сдвиньте ▲CUE/▶▶REVIEW вверх в сторону ▶▶REVIEW. Отпустите кнопку там, где следует начать воспроизведение.
Сделать паузу в записи	Сдвиньте ▲PAUSE в направлении стрелки. Гаснет индикатор REC/BATT (M-560V) или BATT (M-455/450) или REC (M-650V).
Извлечь кассету	►■

Примечание

Если запись будет воспроизводиться на другой аппаратуре, выберите скорость 2,4 см. В противном случае качество звука может быть нарушено.

О функции VOR (Voice Operated Recording – речевое управление записи) (только модель M-650V/560V)

• Работа функции VOR зависит от окружающих условий. Если она действует ненадежно, установите переключатель VOR в положение OFF.

• При использовании в шумном месте аппарата будет оставаться в режиме записи. И наоборот, если звук слишком тихий, аппарат не будет начинать запись. Установите VOR в положение H (высокий) или L (низкий) в зависимости от условий.


Прослушивание звука при записи

Подключите наушник (в комплект не входит) к гнезду EAR.


Громкость звука во время записи не регулируется рукояткой VOL.

Предотвращение случайного стирания записи

Отломайте и удалите защитные ушки кассеты. В дальнейшем, чтобы использовать эту кассету для новой записи, закройте оставшиеся от ушек углубления клейкой лентой.



Воспроизведение записи

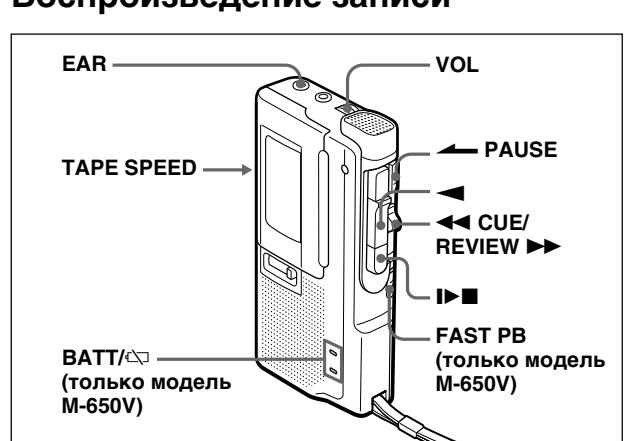

- Установите кассету воспроизводимой стороной наружу.
- Выберите ту скорость ленты, на которой была сделана запись.
- Нажмите ▲.
- Поверните регулятор VOL, чтобы настроить громкость.

При подключении наушников (в комплект не входит) к гнезду EAR Вы получите монофоническое воспроизведение одновременно правого и левого каналов.

Для того, чтобы	Нажмите или передвиньте
Остановить воспроизведение/остановить перемотку ленты вперед или назад*	►■
Сделать паузу в воспроизведении	Передвиньте ▲PAUSE в направлении стрелки. Индикатор REC/BATT (M-560V), BATT (M-455/450) или REC (M-650V) гаснет.
Перемотать ленту вперед	Передвиньте ▲◀CUE/▶▶REVIEW в сторону ▲CUE в режиме остановки.
Отмотать ленту назад	Передвиньте ▲◀CUE/▶▶REVIEW в сторону ▶▶REVIEW в режиме остановки.
Найти нужное место впереди по ходу воспроизведения (CUE)	Передвиньте при воспроизведении переключатель ▲◀CUE/▶▶REVIEW вниз и отпустите его в нужном месте.
Найти нужное место в уже воспроизведенном участке (REVIEW)	Передвиньте при воспроизведении переключатель ▲◀CUE/▶▶REVIEW вверх и отпустите его в нужном месте.

* Это приведет к быстрой перемотке ленты вперед. Индикатор REC/BATT (M-560V), BATT (M-455/450) или REC (M-650V) гаснет.

Примечание

Если лента полностью дошла до конца или быстро перемоталась при поиске вперед/назад во время воспроизведения (CUE/REVIEW), переключатель ▲◀CUE/▶▶REVIEW может не возвратиться в среднее положение, когда Вы отпустите его. В таком случае, чтобы начать воспроизведение, возвратите переключатель в среднее положение.

Ускоренное воспроизведение (только модель M-650V)

Сдвиньте переключатель FAST PB в направлении стрелки. Скорость воспроизведения увеличится.

Для возвращения к обычной скорости верните переключатель FAST PB в прежнее положение.

Окончание ленты в кассете

В режимах записи и воспроизведения по окончании ленты в кассете диктофон останавливается, и утопленные кнопки автоматически возвращаются в исходное положение (механизм автоматического отключения).

По окончании перемотки вперед или назад не забывайте возвращать переключатель ▲◀CUE/▶▶REVIEW в среднее положение.

Запись/воспроизведение с помощью подключенной аппаратуры (только модель M-650V)

Запись на внешний микрофон

Подключите микрофон к гнезду MIC. Используйте микрофон с низким сопротивлением (менее 3 кΩ), такой как ECM-T6 (в комплект не входит). При пользовании активным микрофоном питание на него подается через диктофон.

Примечание

При записи через внешний микрофон работа функции VOR может нарушаться из-за несовпадения чувствительности.

Перезапись с другого магнитофона

Подсоедините другой магнитофон к гнезду MIC, используя соединительный кабель RK-G64HG (в комплект не входит). Включите диктофон на запись, а другой магнитофон – на воспроизведение. Переключатель VOR должен в этом случае находиться в положении OFF.

Меры предосторожности

Питание

- Диктофон работает только от постоянного тока с напряжением 3 В.
- Для питания от сети пользуйтесь только сетевым адаптером, рекомендованным для данной модели.</li